



Floor Stripper



Pioneer Eclipse Floor Stripper is an extra strength floor stripper formulated for use in environments where slow-drying stripping procedures are required.

DIRECTIONS

Read all directions and Safety Data Sheets (SDS) before using.

1. Mix Pioneer Eclipse Floor Stripper in a mop bucket per the following dilution ratios:

For sealer and coating removal:

1:4 (32 US oz per gallon or 250 ml per 1 liter of water)

For coating removal only:

1:8 (16 US oz per gallon or 125 ml per 1 liter of water)

2. Apply solution liberally to the floor and allow to soak for 10 minutes. Do not allow stripper solution to dry on floor.
3. Scrub floor with automatic scrubber or stripping machine. Pick up dirty solution with automatic scrubber or wet vac.
4. Rinse floor with cold tap water. Allow floor to dry thoroughly before applying sealer or coating.

NOTE: Test floor for color fastness in an inconspicuous area.


PRODUCT INFO

Product Code 518MP

Volume 1 US Gallon

Shipping Packaging 4 x 1 gallons

SURFACES

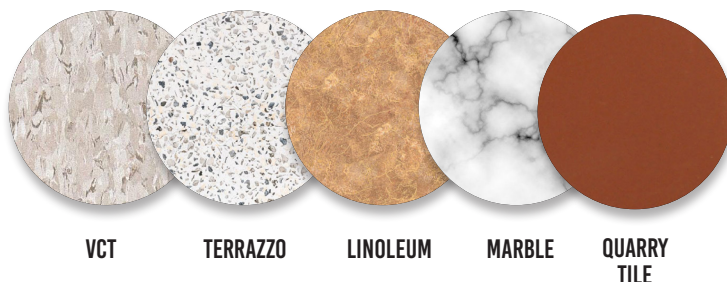

TECHNICAL DATA

Description	Low odor floor stripper
Appearance	Clear liquid
pH <small>ASTM E70-07</small>	12.5 (as supplied)
Viscosity (Brookfield)	<10 centipoise
Flash Point <small>ASTM D56-05 (2005)</small>	>200°F
VOC <small>40 CFR Part 59 Subpart D</small>	25.7% (as supplied) 5.1% (1:4) 2.8% (1:8)
Non-volatile solids	22%
Fragrance	none added
Shelf Life <small>ASTM D1791-93 (2008)</small>	2 years
Density <small>ASTM D1475-13 (2008)</small>	8.8 lb/gal
Freeze/Thaw <small>ASTM D3209-93 (2008)</small>	Passes 3 cycles
Container	1 US Gallon

