



PowerPolish™ Diamond Discs


- EASY-TO-USE, STEP-BY-STEP SYSTEM
- DESIGNED FOR USE WITH A WIDE VARIETY OF FLOOR CARE EQUIPMENT
- CONCRETE, TERRAZZO, MARBLE, QUARRY TILE, NATURAL STONE

PowerPolish™ Diamond Discs provide an easy-to-use, cost effective system for repairing damage and restoring gloss to a variety of polished floors. Each disc is labeled in a step-by-step, sequential system to eliminate errors and easily attaches to any machine via hook and loop (no tools required).



3" Diamond Discs



Step-By-Step System

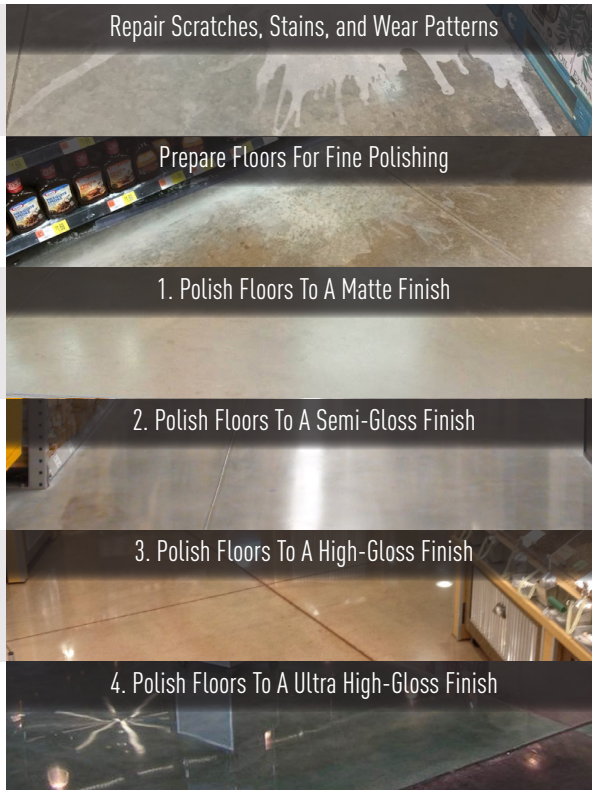

5" Diamond Discs



PROTECT your polished floors with the proper application of LockOut or TopShield.



MAINTAIN your polished floors with Reclaim Hard Floor Cleaner & Maintainer and PowerPolish burnishing pads.




PowerPolish™ Diamond Discs

DISC APPLICATION	PRODUCT CODE	PACKAGE QTY	Average Sq. Ft. Per Machine Used*		
			225GP (5 Discs)	420GPHD (6 Discs)	450GP (12 Discs)
Repair (100 Grit)	DP310REK	6	25K	20K	48K
Prep (200 Grit)	DP310PRK	6	25K	20K	48K
Polish 1 (400 Grit)	DP310P1K	6	12K	10K	28K
Polish 2 (800 Grit)	DP310P2K	6	15K	15K	30K
Polish 3 (1800 Grit)	DP310P3K	6	20K	20K	32K
Polish 4 (3000 Grit)	DP310P4K	6	25K	20K	32K

3" / 83mm

PowerPolish Diamond Discs

For use on most grinding & polishing machines, for wet or dry applications.

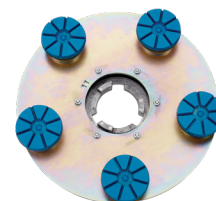

HydraShine (SA031900) and 3" PowerPolish Discs

DISC APPLICATION	PRODUCT CODE	PACKAGE QTY	Average Sq. Ft. Per Machine Used*				
			17" Floor Machine (5 Discs)	20" Floor Machine (5 Discs)	20" Auto Scrubber (5 Discs)	27" Auto Scrubber (8 Discs)	32" Auto Scrubber (8 Discs)
Repair (100 Grit)	DP311REK	10	64K	75K	100K	135K	160K
Prep (200 Grit)	DP311PRK	10	64K	75K	100K	135K	160K
Polish 1 (400 Grit)	DP311P1K	10	51K	60K	80K	108K	128K
Polish 2 (800 Grit)	DP311P2K	10	51K	60K	80K	108K	128K
Polish 3 (1800 Grit)	DP311P3K	10	51K	60K	80K	108K	128K
Polish 4 (3000 Grit)	DP311P4K	10	51K	60K	80K	108K	128K
Adaptor Pad	DP311APK	20					

5" / 127mm

PowerPolish Diamond Discs

For use on automatic scrubbers & single disc low speed polisher, for wet applications only.



Standard Floor Pad with 5" PowerPolish Discs and Adaptor Pads

* Average square feet of disc application will vary based on site conditions and operator variables

HOW TO USE POWERPOLISH DIAMOND DISCS

Where To Begin?

Disc Application:

- Repair** Start here to remove scratches, stains, and distinct wear patterns
- Prep** Start here if the floor has a very dull appearance and/or very minor scratches and stains
- Polish 1** Start here if the floor has a flat appearance without scratches and stains - achieves a matte finish

For The Desired Level of Gloss:

- Polish 2** Continue with Polish 2 to achieve a semi-gloss finish
- Polish 3** After Polish 2, continue with Polish 3 to achieve a high gloss finish
- Polish 4** After Polish 3, continue with Polish 4 to achieve an ultra high gloss finish

Polishing The Floor

1. Install PowerPolish Discs to machine (Quantity will vary by machine)
2. Make multiple passes slightly overlapping each previous pass. Alternate the direction of each pass to create a crosshatch pattern.
 - 3" PowerPolish Disc: 2 – 4 passes
 - 5" PowerPolish Disc: 4 – 6 passes
3. Pick up any solution or debris using an auto scrubber or mop.
4. Repeat steps 1 – 3 with each consecutive disc (Polish 1, Polish 2, Polish 3, etc) until desired gloss is achieved